
 
## LWC Radio — Everybody Needs a Connection!

Midland T10 X-Talker<sup>®</sup> Radio Instructions


(Different Radio or Questions? - Contact Your Safety Area Captain for Help)

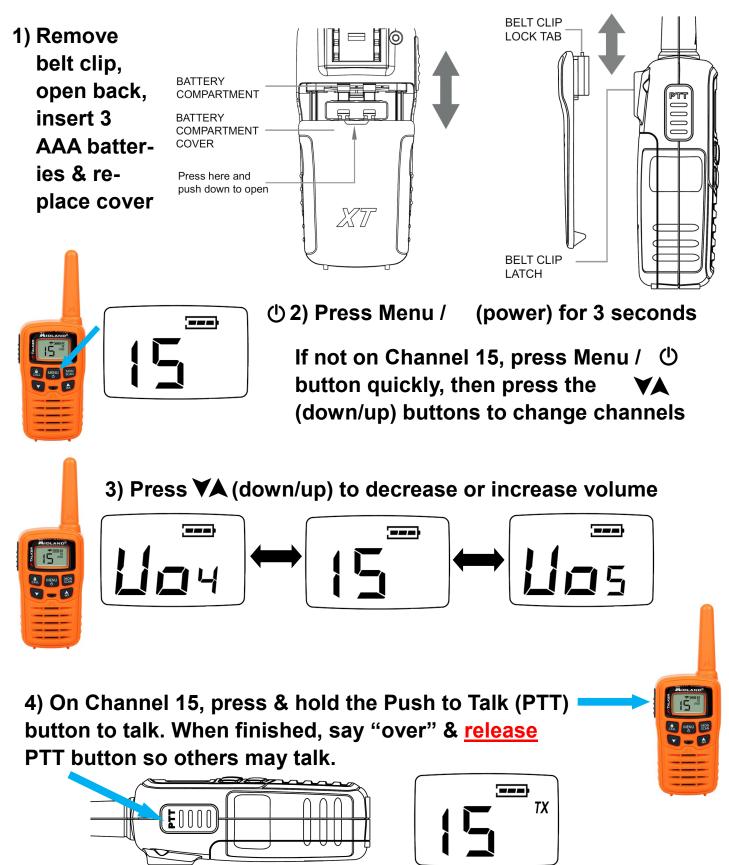


## 5) Press here for 3 seconds to switch to WX (weather channel), press again for Channel 15





 

## LCD DISPLAY

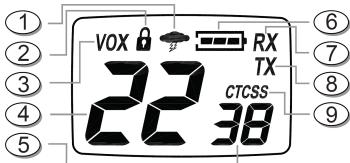

- 1. NOAA WEATHER (WX) BAND ICON –Indicates when the radio is in Weather Band mode.
- 2. **KEY LOCK ICON** Indicates KEY LOCK mode is on.

- 3. **VOX ICON** Indicates when VOX mode is active.
- 4. **CHANNEL NUMBER** Changes from 1~22 on GMRS/FRS band (1~10 on WX band).
- 5. **PRIVACY CODE** Indicates Privacy Code selected by user (oF~38).
- 6. **BATTERY METER** Indicates the battery level.
- 7. **RECEIVE (RX) ICON** Indicates radio is receiving a transmission.
- 8. **TRANSMIT (TX) ICON** Indicates radio is transmitting a signal.
- 9. **PRIVACY CODE ICON** Indicates Privacy Code is on.



- 10. **PTT Button** Press and hold to transmit voice communication.
- CALL/LOCK Button Press to send a CALL ALERT signal. Press and hold to turn KEY LOCK on/off.
- 12. MIC Built-in microphone.
- 13. USB CHARGING JACK (T31 only)
- 14. **SPEAKER** Built-in speaker.
- 15. ANTENNA
- 16. EXTERNAL SPEAKER/MIC JACK (T31 only)
- 17. **MENU Button** Press momentarily to access Menu mode.
- MONITOR/SCAN Button Press to enter SCAN mode. Press and hold to enter MONITOR mode.
- UP/WX ▲ and DOWN ▼ Buttons –Make adjustments in MENU mode. Press and hold the UP button for 3 seconds to activate the NOAA Weather Radio function.