


Getting Started

Front Panel Guide

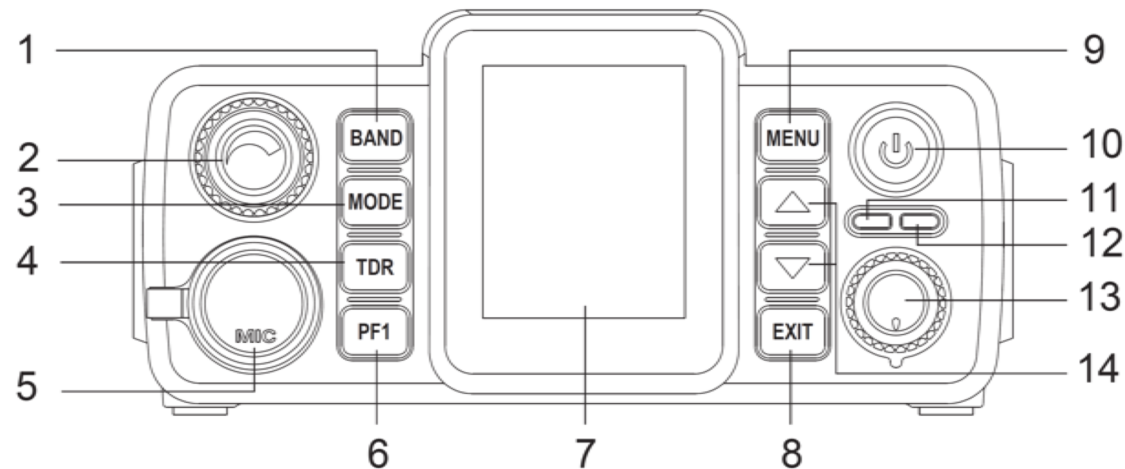

1. Band Key (Page 32)

2. Volume Knob

3. Mode Key (Page 32)

4. TDR Key (Page 31)

5. Hand Microphone Port

6. PF1 Key (Page 53)

7. LCD Display

8. Exit / Cancel Key

9. Menu / Enter Key

10. On / Off Button

11. TX LED (Red)

12. RX LED (Green)



13. Frequency / Channel Knob

14. Up/Down Keys

A full description of each front panel function key is located on Page 51.

Getting Started

Hand Microphone

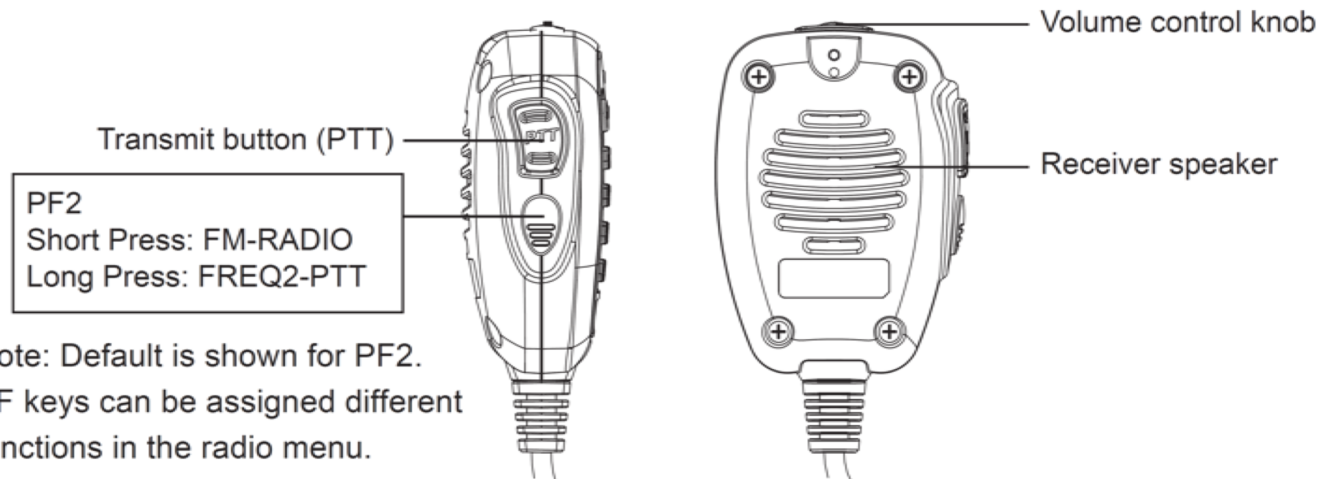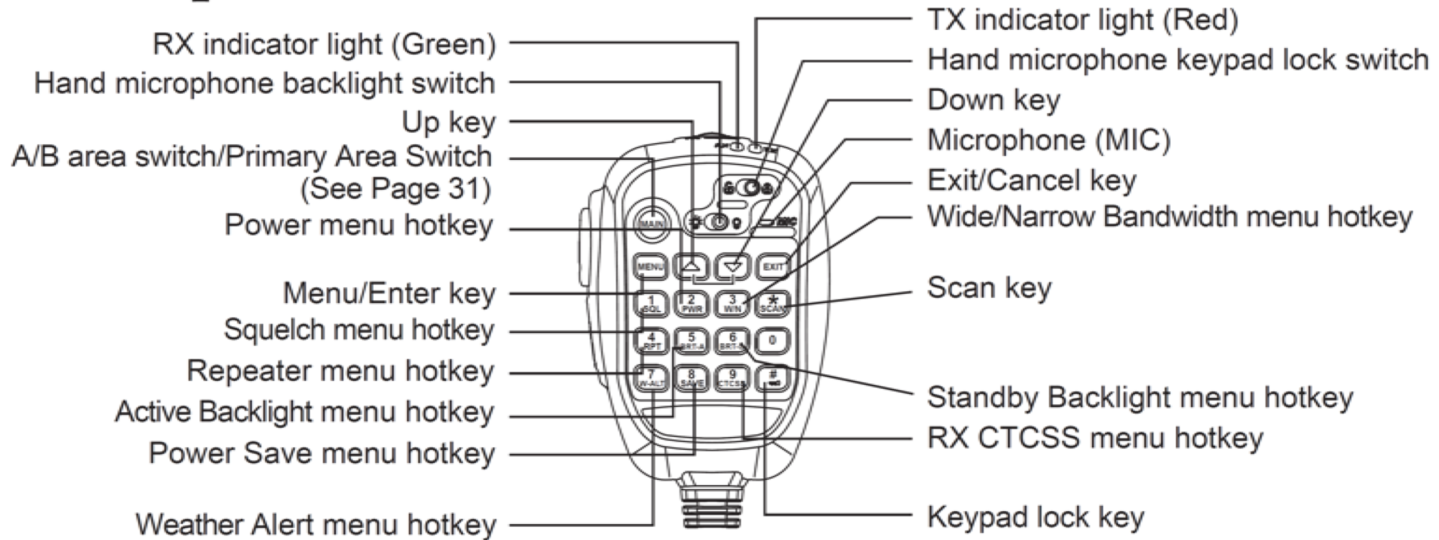

LCD Guide

